

Mechanical Quick Lock Rebar Coupler

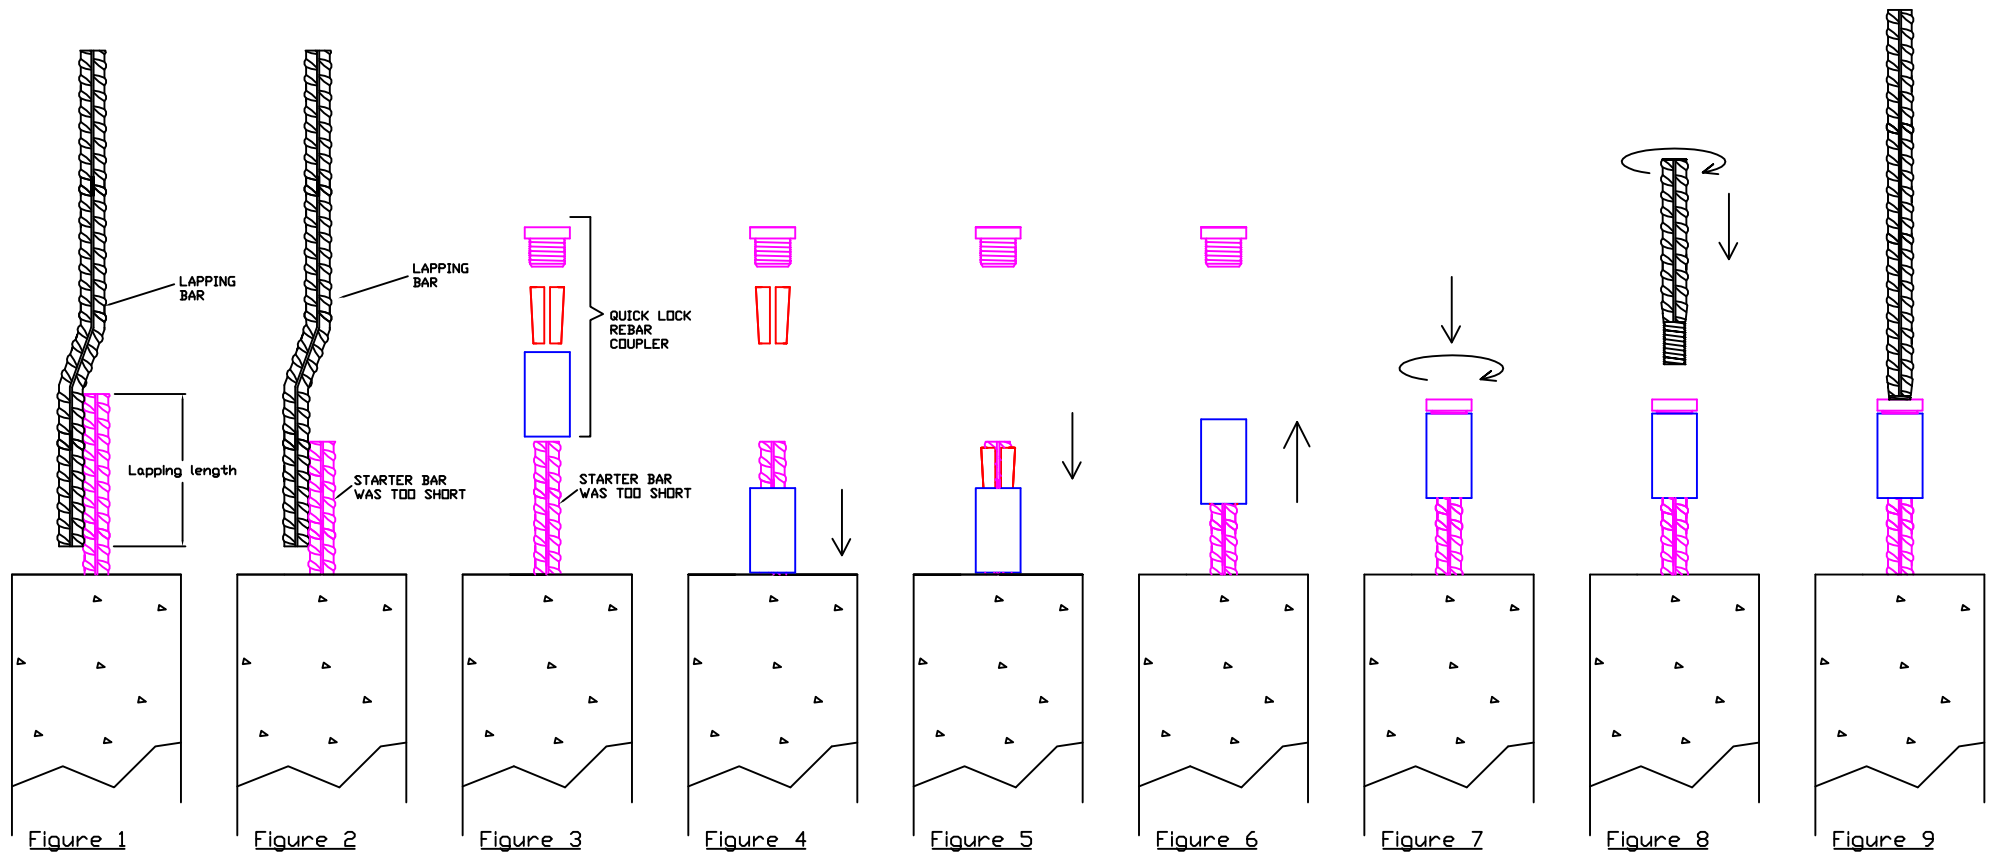


Figure 1 : The overlapping method to connecting the steel bar.

Figure 2 : The length of the starter bar was too short for lapping.

Figure 3 : The **Quick Lock Rebar coupler set** can solve the problem.

Figure 4 : Position the **Barrel** into the starter bar.

Figure 5 : Positioning the **Wedge** on to the starter bar.

Figure 6 : Pull the **Barrel** up until against with the **Wedge**.

Figure 7 : Rotated the **Locknut** unit against the starter bar.

Figure 8 : Rotated the continuation bar until against the starter bar.

Figure 9 : The starter bar was connected to a new length of bar.